


# TABLE ASSEMBLY INSTRUCTIONS


REV #	REVISION DESCRIPTION	DATE

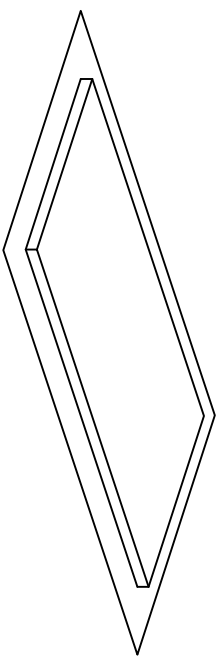

**STEP 1:**  
REMOVE ALL PACKING MATERIAL FROM  
TABLE BASE & TOP PANEL

**STEP 2:**  
LAY A CLEAN COVER ON FLOOR


**STEP 3:**  
TURN TABLE TOP UPSIDE DOWN  
& LAY ON COVER

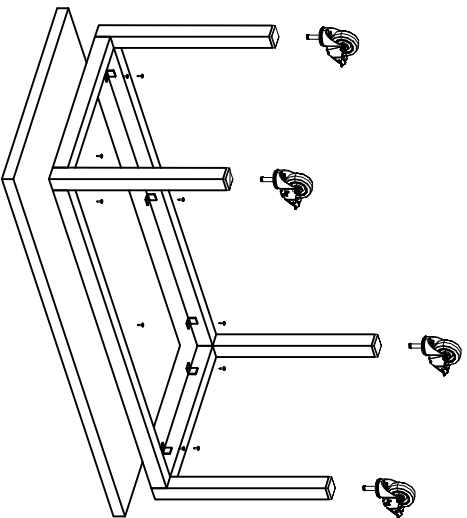

**STEP 4:**  
TURN TABLE BASE UPSIDE DOWN & CENTER ON TOP  
NOTE: THE BASE IS INSET 1 1/2" FROM THE TOP  
EDGE ON ALL SIDES

**STEP 5:**  
ATTACH BASE TO BOTTOM FACE OF TOP WITH  
SCREWS PROVIDED INSERTED THRU HOLES IN  
"L" SHAPED MOUNTING TABS LOCATED ON THE  
INSIDE OF THE APRON RAILS

**STEP 6:**  
THREAD CASTER STEMS INTO INSERTS LOCATED IN  
THE BOTTOM OF THE LEGS.

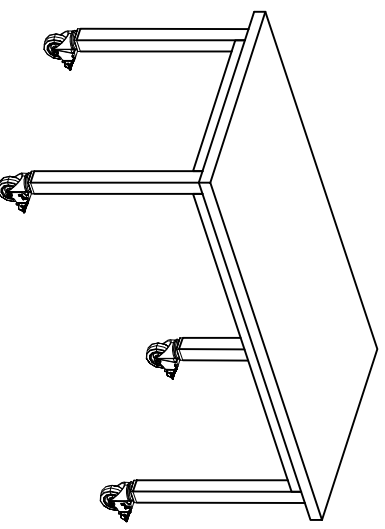

**STEP 7:**  
TURN ASSEMBLED TABLE UPRIGHT FOR USE

## MAKER COLLECTION

**3branch**  
product design solutions

P 847.291.3900  
F 847.291.3901  
www.3branch.com

PROJECT# 15-  
PROJECT: \*

DATE: 05.12.15

DRAWN BY: 3branch

SCALE: AS NOTED

3branch ITEM # \*

DESCRIPTION: MAKER TABLE  
ASSEMBLY INSTRUCTIONS

DIMENSIONS: N/A

DRAWING # MK-ASSEMBLY-01

REVISION # 1

SHEET 1 OF 1